

May 24, 2004

5 Speed Main Drive Gear Installation - Twin Cam, XL, BUELL

When replacing a fifth gear mainshaft (main drive gear), or anytime the mainshaft and gear are separated, apply a coating of grease, part number 99857-97 to the bearings and to the mating surface on the mainshaft. This will improve initial startup lubrication and extend the life of the bearing.