

2006 Fairing Equipped Touring Model Ignition Switches

Domestic fairing-equipped touring models now use the 2003-later HDI style ignition switch. The replacement procedures and operation of the 2006 domestic FLHT, FLTR & FLHX Model ignition switches has changed from previous years. Review the appropriate year Service Manual for replacement procedures and required service tools. Please refer to the charts below and the owner’s manual for operation instructions. The first chart is for 1980 – 2005 Domestic fairing-equipped touring models. The bottom chart is for 2003 – 2006 HDI and 2006 Domestic fairing-equipped touring models. Please review the changes in operation with your customers during vehicle delivery.

Table 14. Ignition/headlamp Key Switch 1980 - 2005 Domestic

MODEL	LOCATION	SWITCH POSITIONS/FUNCTIONS
FLHT, FLTR	At bottom of instrument panel.	To unlock the switch and the front fork, push the key in and turn it counterclockwise. Be sure you push key in to move key to either position.
		To lock the fork, move fork to the full left position. Push down on knob and turn it to the left, to the FORK LOCK position. Turn key to lock. Remove the key.
		ACCESS/ACCESSORY - Accessories and hazard warning flasher can be left on. Instrument lamps are on. Brake lamp and horn can be activated. Key may be removed. The ignition, lamps and accessories work when the switch is in the IGNITION position, as required by law in some localities.*

Table 17. Ignition/Headlamp Switch Positions: 2003 - 2006 HDI and 2006 Domestic

MODEL	LOCATION	SWITCH POSITIONS/FUNCTIONS
FLHT FLHTC FLHTCU FLTRI FLHX	At bottom of instrument panel.	To unlock the switch and the front fork, push the key in and turn it counterclockwise. The switch knob will pop up. Ignition/headlamp key switch can be locked in the accessory position however, forks will remain unlocked.
		To lock the fork turn fork to full left position. Turn switch knob to fork lock. Push knob down and turn key to LOCK. Remove the key.
		ACCESS/ACCESSORY - Accessories and hazard warning flasher can be left on. Instrument lamps are on. Brake lamp and horn can be activated. Key may be removed. The ignition, lamps and accessories work when the switch is in the IGNITION position, as required by law in some localities.*