

TT276 – November 17, 2006

2007 VRSC Model Fuel Gauges

At PDI or when the fuel tank is empty you may notice that the fuel gauge reading is inaccurate when you first turn the ignition on. This condition is considered to be normal.

The '07 fuel sensor will not operate normally until fuel is put into the tank. The new sensor operates by sensing heat and fuel vapors, after fuel is put into the tank the fuel gauge should operate normally. If the fuel gauge does not read properly during PDI, after adding fuel and cycling the ignition switch, please notify Technical Service.