

Oil Temperature Gauge Kit Operation

When installing 75324-05, 75320-05, or 75265-04 fairing mount oil temperature gauges on 2007 Touring Models equipped with an oil cooler the gauge will not begin to read accurate until the oil temp has reached approx. 200 deg F. As installed, the sending unit is placed in the oil line *after* the thermostat for the oil cooler. With this installation the oil does not flow past the sender until the thermostat opens, so the gauge will not be reading the temperature of the oil from the oil pump until the thermostat opens.

