

### 2008 VRSC Spoke Wheel Maintenance/ 30 AMP ABS Fuse Rating

Please refer to the quick reference maintenance chart on page 1-6 of 2008 VRSC Service Manual (99501-08) and page 167 of Model Year 08 VRSC Owners Manual (99736-08) table 29, titled regular service intervals.

Please note that there is an omission regarding the servicing of spoke wheels (VRSCAW models) in the maintenance table.

These wheels should be checked for proper spoke tension and trueness at the 1,000 Mile (1600Km) service, 5000Mile (8000Km) service, and 20000 Mile (32000Km) service.

Additionally, the table 8-2 ( Fuse Specifications) shown in section 8.1 of the 2008 VRSC Service Manual **incorrectly** lists the ABS fuse as **15 AMP**, it should be **corrected** to read **30 AMP**.

**Table 8-2. Fuse Specifications**

<b>FUSE</b>	<b>RATING (AMPERES)</b>
Maxi-fuse	40
ABS fuse (if equipped)	<b>30</b>
Battery fuse (instrument console/fan relay)	15
Ignition fuse	15
Lighting fuse	15
Accessory fuse	15
ECM fuse	15
Security fuse	15
Fuel pump fuse	15