

# Table of Contents

- REF: Oiling & Lubrication** ..... 3
- Oil Lines & Modifications** ..... 3
- Running Copper Oil Lines** ..... 3
  - Copper Lines for Ext Filter (75 XL)* ..... 3
- Make Your Own Custom Oil Pump Hose** ..... 6
  - For 91-03 Sportsters* ..... 6
- Aftermarket Hoses** ..... 7
  - IRONMACHINE Prefabbed Hoses* ..... 7
  - Goodridge Oil Line Kits* ..... 8




[Go To Technical Menu](#)

## REF: Oiling & Lubrication

## Oil Lines & Modifications

### Running Copper Oil Lines

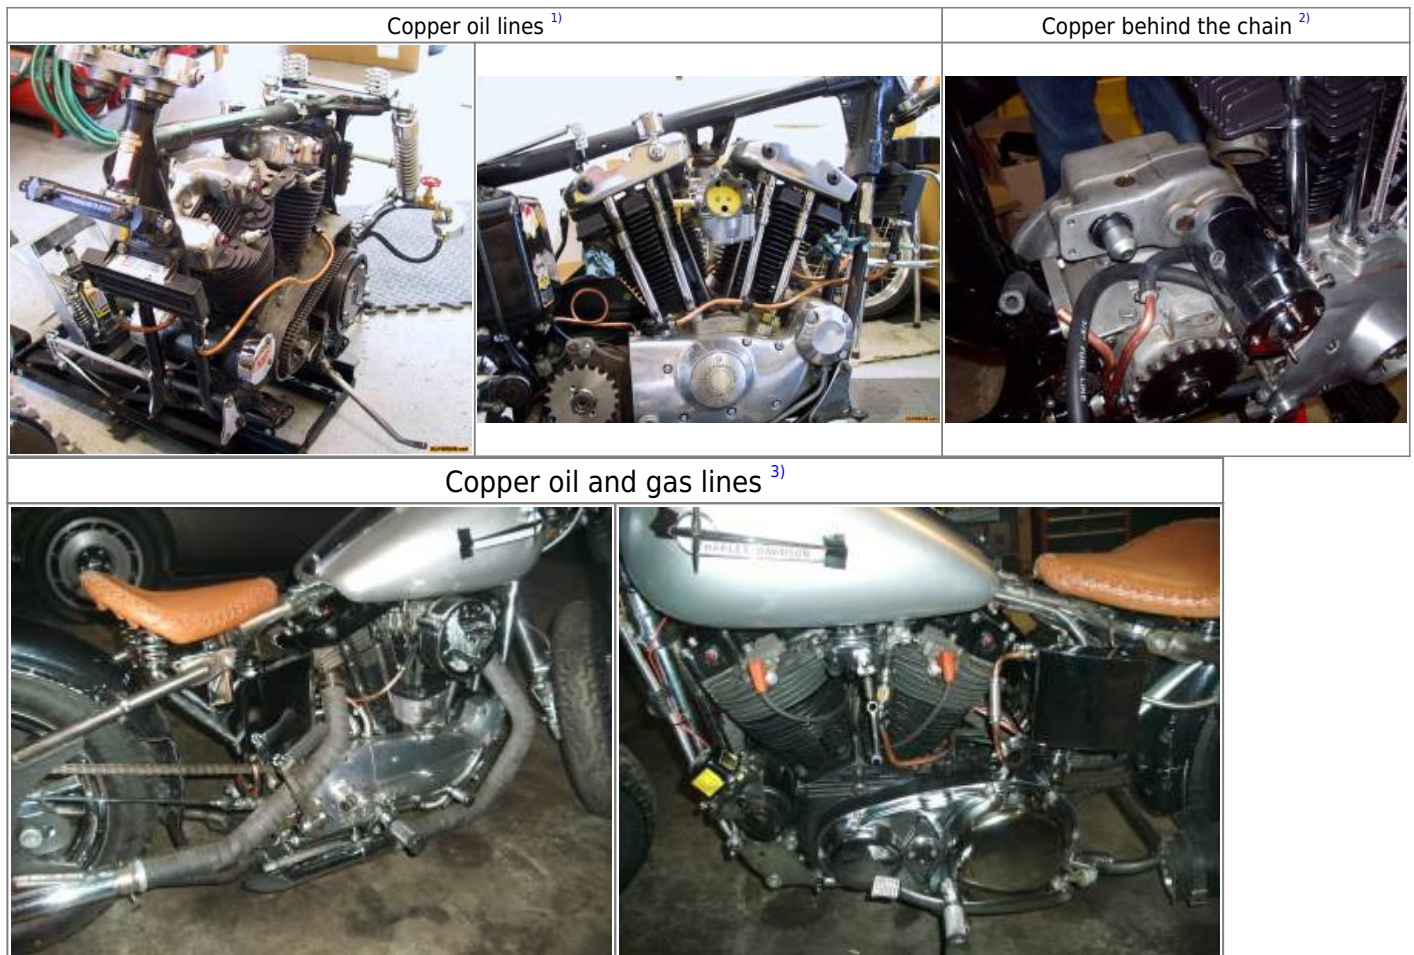

### Copper Lines for Ext Filter (75 XL)

Article by sifty of the XLFORUM <sup>4)</sup>

The oil return fitting is on top of the case beside the vent, not in front of the pump.

So there's no easy way to route the lines for a filter.  
 The return needs to run down and forward to the oil filter and back to the tank.  
 (in addition to the vent line and the oil feed to the pump)

1. The oil tank mounting bracket has a large grommet in it.
  - The hole was enlarged to help cut down kinks while passing 3 lines through it.
  - The hole was filed out to a rounded rectangular shape and a large round grommet was cut down fit the new hole.
2. Because of tight space, short sections of copper tubing were used in place of thick rubber hose.
  - A short piece of rubber was placed at each end of the copper lines.
  - The ID of the copper tubing is slightly smaller than the desired 3/8" so it isn't ideal.
  - But it avoids any 'squishing' of the rubber lines.
  - And is probably still may be better than the 90 degree elbow joint at the output connection.
  - The copper is refrigeration tube which is soft drawn and in a coil and doesn't need annealing.
  - Copper work-hardens easily however.
  - A tubing bender was used for the bends in small increments with care not to make too tight a bend.
  - With double bends, the bender wouldn't work well.
  - And the tube tended to flatten out or kink when trying to bend by hand.
3. Getting the bends in the right place is difficult.
  - You have to mark the bend location on the tube and get the bender in the right spot and at the correct angle.
  - The plan was to feed the oil down to the filter hose and back in copper.
  - This should leave enough room for the oil feed from the tank to be run entirely in rubber.
  - The two lines are temporarily in position (note smooth curves).




1. With the oil feed tube in place, it seems to be enough room there.
2. The tubes underneath were staggered so the connections would not be beside one another.  
 Note, these are just the first stage, there is no flaring of the tube ends yet.
3. The cut ends weren't perfectly round with so a long spring (from a hardware store) was snugly fitted into the end before bending.  
 The bends were made slowly and the spring pulled out under tension afterwards leaving a perfectly round section.






1. The ends were double flared for strength and a solid connection to the flexible hose sections. This is the first pass on the flaring tool.
2. The second pic shows the finished double flare.
3. In the third, the tubing is bent and ends prepped.

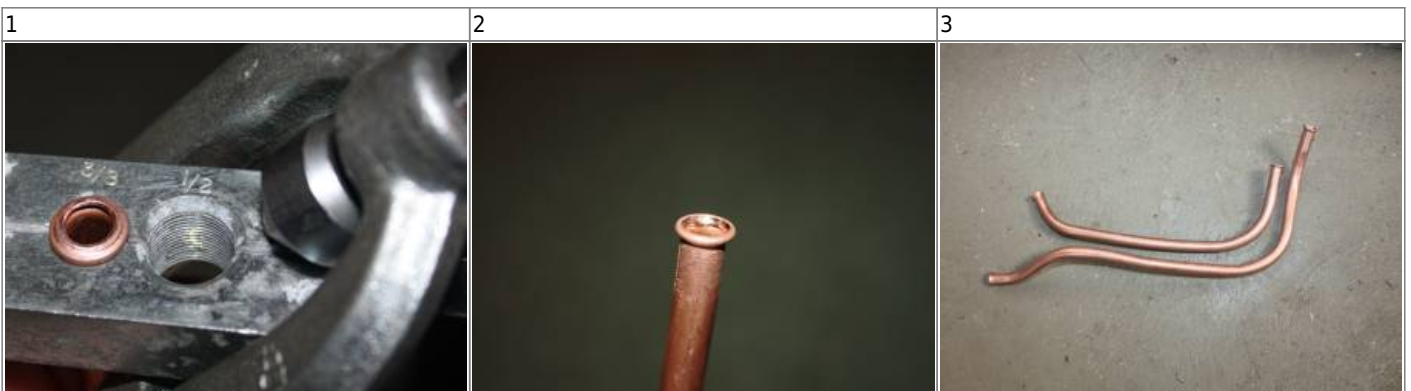

1. Adhesive lined heat shrink was installed around the copper tubing for protection and vibration damping. They'll also be snugged down with cable ties so they shouldn't rub against any moving parts.
2. Thin walled feed line (for max clearance) runs straight down and along the frame rail and tied the lower hoses where appropriate. Heavy duty hydraulic hose for the lower sections to the filter to avoid any of the ties crimping the hose and to offer more mechanical protection.

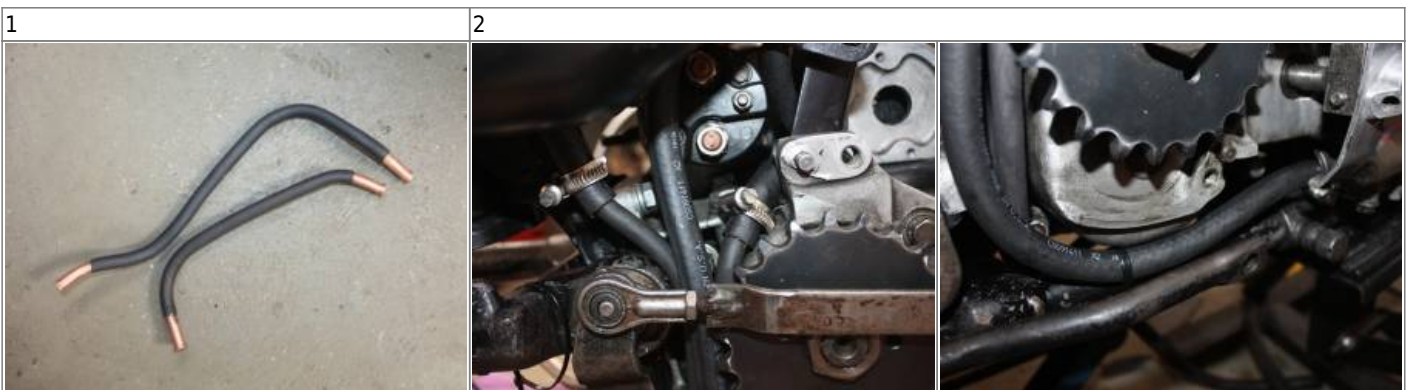

# Make Your Own Custom Oil Pump Hose

## For 91-03 Sportsters

- For roughly around \$20, you can make (or have made) the hose from the oil pump to the filter housing.  
You'll have to find a shop that has the proper equipment to make the crimp.
- **Parts include:**

(1) - Parker 43 Series (10143-2-4)	1/8"x27 male NPTF rigid crimp fitting for 1/4" hose (Overall length - 1.80" / 46mm) <sup>5)</sup>
(1) - Parker 43 Series (10643-5-4)	5/16" (1/2"x20 threads) female JIC 37° (straight) swivel crimp fitting for 1/4" hose (Overall length - 2.03" \ 52mm) <sup>6)</sup>
(App. 6") length - Parker (471TC-4-RL)	1/4" / 6.4mm hydraulic hose <sup>7)</sup> 2-wire braided synthetic rubber hydraulic hose. Approved for 43 Series fittings, Min bend radius (2" \ 50 mm), ID (1/4" / 6.3mm), OD (0.51" / 13mm) Rated pressure (5800 psi \ 40.0 MPa), ratings (USCG HF / DNV / ABS / MSHA Accepted) Working oil temp (-40 to +212°F / -40 to +100°C), Weight (.2 lbs/ft / .3 kg/m <sup>8)</sup> <sup>9)</sup>

Click on a pic to enlarge:



Custom oil pump hose made with Parker Hannifin fittings and hose <sup>10)</sup>

- **Notes:**
  - Stainless steel fittings must be assembled with a Karrykrimp 2, PHastkrimp, Superkrimp or Parkrimp 2 crimper per the manufacturer. These are very expensive tools thus finding a shop that is properly equipped is essential. <sup>11)</sup>


# Aftermarket Hoses

## IRONMACHINE Prefabbed Hoses

These hoses are made in the USA by IronMachine. [Link to their website add](#)

Hose below replaces HD (62631-91) from the oil pump feed to the oil filter on all 1991-2003 Sportster 883/1200s and 1995-2002 BUELL tube frame models.

Working pressure is 225 PSI. Overall length is 8.75". It also comes with a lifetime warranty.

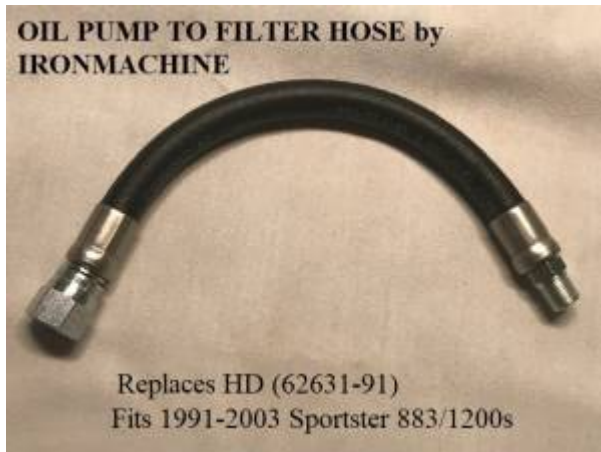

## Goodridge Oil Line Kits

This a Goodridge oil line for Sportsters sold in many places in Europe.

This hose (complete) is reportedly not being assembled anymore by the company but can still be found online.

The individual parts are also available as a "Built a Hose" kit and you can you buy the parts separately and put them together yourself.

That way you can cut it to the length you want / need (good for custom applications).

The individual parts can be purchased online as well as in this link to [Motorcycle StoreHouse.com](https://MotorcycleStoreHouse.com)

You can buy an installation tool but it it's not absolutely necessary per the manufacturer.

You can also find Goodridge braided hoses online (5/16", 1/4" and 3/8") thru companies that ship to the US like these at [Dennis Kirk.com](https://DennisKirk.com).

The 210 series is PTFE lined whereas the 202 series is neoprene lined.

Goodridge also makes hoses for brake line applications.

The part numbers will vary depending on where you buy them from.

Dennis Kirk's part numbers for fittings are:

49-7974 (45 degree)

49-7975 (90 degree)

497976 (straight)

And fittings:

49-7977 (straight 1/4 in. NPT)

49-7978 (straight 1/8 in. NPT)

The Goodridge parts numbers for fittings are listed at the Motorcycle StoreHouse link above.

There is a greater number of size and fitting information there.

Goodridge (complete hose) part number:

(921859) 86-90 Sportsters

(921862) 91-03 Sportsters (oil pump to oil filter pad)

Construction: It has PTFE inner tubing compatible with all fluids inside a stainless steel braid (14mm OD) with chrome plated steel fittings (reusable).

Specs: Burst pressure - 690 bar (10,008 psi), Working temp (-70°C to +260°C) (-94°F to 500°F)





17)

**Go To Technical Menu**

1)

photos by zman69 of the XLFORUM

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-era-specific-and-model-specific/ironhead-sportster-motorcycle-talk-1957-1985/17654-new-copper-lines-and-pressure-gauge?t=29406>

2)

photo by Jtrapass of the XLFORUM

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-era-specific-and-model-specific/ironhead-sportster-motorcycle-talk-1957-1985/61566-i-need-your-help-iron-head-folks/page2?t=360592&page=2>

3)

photos by calabeast of the XLFORUM

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-styles/chopper-bobber-talk/89536-bobber-progress?t=719598>

4)

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-era-specific-and-model-specific/ironhead-sportster-motorcycle-talk-1957-1985/146604-first-harley-1975-xl1000-caf%C3%A9-project/page30?t=1592463&page=30>

5)

<https://www.hoseandfittingsetc.com/product/fittings/hose-fittings/parker-43-series/43-series-nptf-pipe-fittings>

6) 11)

<https://www.hoseandfittingsetc.com/product/fittings/hose-fittings/parker-43-series/43-series-jic-fittings>

7) 9)

[https://www.parker.com/literature/Hose%20Products%20Division/4480\\_B51.pdf](https://www.parker.com/literature/Hose%20Products%20Division/4480_B51.pdf)

8)

<https://www.mrostop.com/471tc-4-rl-parker-tough-cover-hydraulic-hose-1-4-in-5800-psi.html>

10)

photos courtesy of LenC of the XLFORUM

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-suspension-frame-forks-handlebars-fuel-tank-oil-tank-fenders/192750-oil-line-replacement/page4?t=2064612&page=4>

12) 13) 14) 15) 16)

photo by Cyclone14 of the XLFORUM

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-era-specific-and-model-specific/frame-mount-evo-sportster-talk-1986-2003-models/202286-high-pressure-oil-line-pump-to-filter?highlight=sportsterpedia#post4504231>

17)

photo by NLXL of the XLFORUM

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-era-specific-and-model-specific/frame-mount-evo-sportster-talk-1986-2003-models/198792-oil-feed-line-between-pump-and-filter/page2?t=2075639&page=2>

From:

<https://sportsterpedia.com/> - **Sportsterpedia**

Permanent link:

<https://sportsterpedia.com/doku.php/techtalk:ref:oil17>

Last update: **2023/12/23 00:54**

